

Setup Options

There are two setup options: Install or Deinstall.

Choose the **Install** button to install the infra red drivers ,or choose the **Deinstall** button to remove the earlier installed infra red drivers.

There are three infra red drivers to be installed or deinstalled:

- Infra Red **Communication** Driver
- Infra Red **Protocol** Driver
- Infra Red **Physical** Driver

All three drivers must be installed and loaded to use the Infra Red serial port. In order to load these drivers successfully, the **IR serial port** setting in the **BIOS setup** must be [**Enabled**]. The physical driver will detect the Infra Red port settings at the driver load time.

The Infra Red drivers and the Serial driver may share the same serial port. This port will be disabled from the Serial driver's use when the Infra Red drivers are installed, or will be enabled to Serial driver's use when the Infra Red drivers are deinstalled..

Existing Drivers

Existing infra red drivers have been detected on your system.

Choose the **Current** button to use the currently installed drivers, or choose the **New** button to install new drivers.

