

<b>If you have a (or compatible)...</b>	<b>Select this in the setup in the Chooser:</b>
<b>Panasonic</b> KX-P1080, KX-P1091, KX-P1092, KX-P1180, KX-P1191, KX-P1592	<b>Panasonic 9-pin</b>
<b>Panasonic</b> KX-P1123, KX-P1124, KX-P2130, KX-P2135	<b>Panasonic 24-pin</b>
<b>Citizen</b> 120, 120D, 180D, 5200, 5800 <b>Epson</b> FX-85, FX-105, FX-185, FX-286, FX-86e, FX-286e, FX-800, FX-1000, FX-850, FX-1050, EX-800, EX-1000, DFX-5000, T-750, AP-2500	<b>Epson FX</b>
<b>Epson</b> LQ-200, LQ-400, LQ-500, LQ-800, LQ-1500, L-750, L-1000, AP-3000	<b>Epson LQ</b>
<b>Epson</b> LQ-510/550/850, LQ-860/950/1010/1050/2500/2550, SQ-850/1050/2550, AP-4000/4500	<b>Epson LQ enhanced</b>
<b>Epson</b> EPI-4000, EPL-6000, EPL-7000, EPL-7100, ActionLaser printers in L-Jet2P emulation mode <b>Panasonic</b> KX-P4400, KX-P5400, KX-SP100	<b>LaserJet</b>
<b>IBM</b> Color Printer	<b>IBM Color Printer</b>
<b>IBM</b> Color Jetprinter	<b>IBM Color Jetprinter</b>