

# Handheld PC and MP3 Display

Setup Date: NOW Missing or Damaged Items: Call Brandy Smith at (817) 415-3994

Description: New display cases for the Handheld PCs and MP3 products.

**Applicable to Select stores**



**Customers can now be Cool & Connected  
with our new MP3 and Handheld PC (HHPC)  
products.**

# Materials Included

Your store may receive one or two display cases depending upon whether or not your store has been selected to carry Handheld PCs. All stores receiving this display have been selected to carry some or all of our MP3 players. Each case will include the following materials:



(One) Blue Channel Strip



(One) Yellow Sign (21" x13")



(One) Glass Case (21" x13" x9") which contains the parts below:




(Three) 21" x 9" glass pieces



(Two) 13" x 9" glass pieces



(Two) 21" x 13" glass pieces

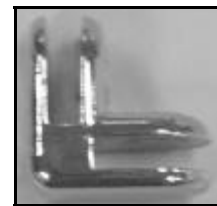

(Twelve) Right Angle Brackets



Two Hinge Brackets



(Four) Center Brackets




(Two) Locking Brackets



(One) Combination Lock

# Assembly of the Glass Cases

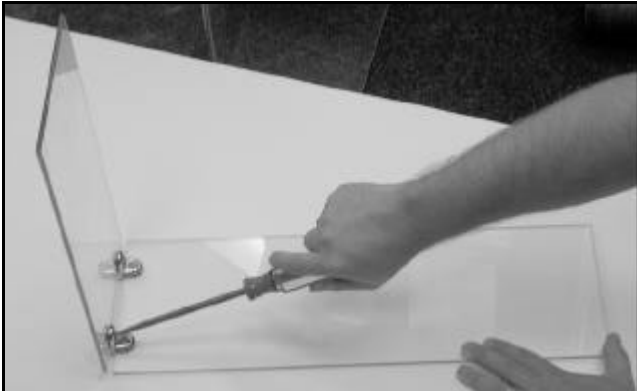

**Step 1:** Take one of the 21" x 9" glass pieces, two right angle brackets, and one of the 13" x 9" side pieces and put them together as shown above.



**Step 2:** Using the remaining 13" x 9" side piece and two right angle brackets attach the side piece to the bottom as you did in step 1.




**Step 3:** Using one of the 21" x 9" glass pieces and four of the right angle brackets, attach the piece to the two side pieces as shown above.



**Step 4:** Place the four center brackets in the middle of each side piece. Be sure that the brackets are even and exactly in between the top and the bottom shelves. If they are not, the products will not fit on both shelves. Then insert the remaining 21" x 9" shelf into the brackets as shown above.




**Step 5A:** Using four of the right angle brackets attach the 21" x 13" glass piece to the back of the glass case. If you have two cases, you will need to follow step 5B for one of the cases.

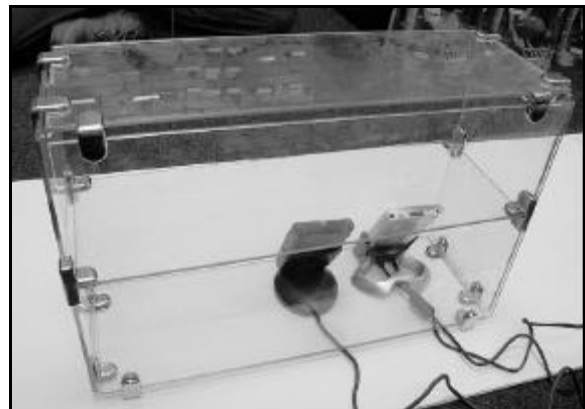

**Step 5B:** If you have two cases, one will be for Handheld PCs. You will need to run the power cords for each Handheld PC out the bottom of the back side. Then attach the glass piece to the back of the case.


# Assembly of the Glass Cases

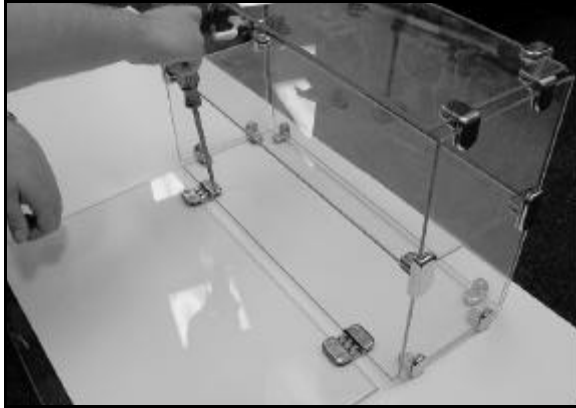


**Step 6:** Using the two hinge brackets, attach the 21" x 13" glass piece to the front of the case. Be sure that the hinges are on the bottom of the case.



**Step 7:** Attach the two lock brackets in the center of the top of the case. (You may want to use some super glue (640-2331) between the lock bracket and the glass to insure that the brackets can not be pulled off of the glass.)

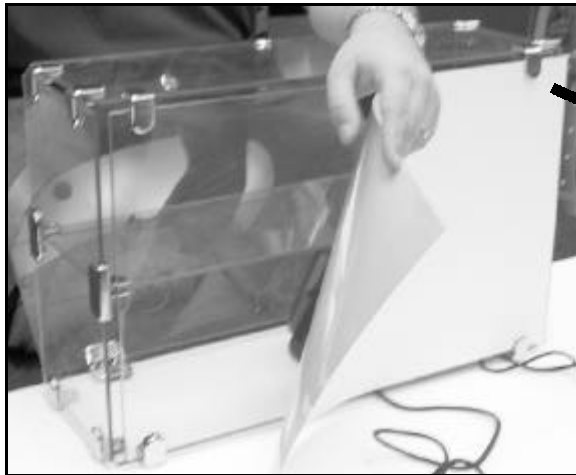


**Step 8:** Loosen the four brackets holding the glass on the back of the case. Slide the yellow 21" x 13" sign on to the back of the case so that the yellow can be seen from the front of the case.

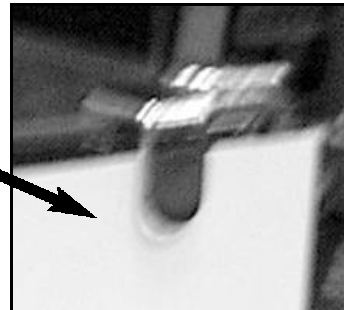


**If you have two display cases, continue to page 5. If you only have one display case, refer to page 6.**

# Two Display Cases

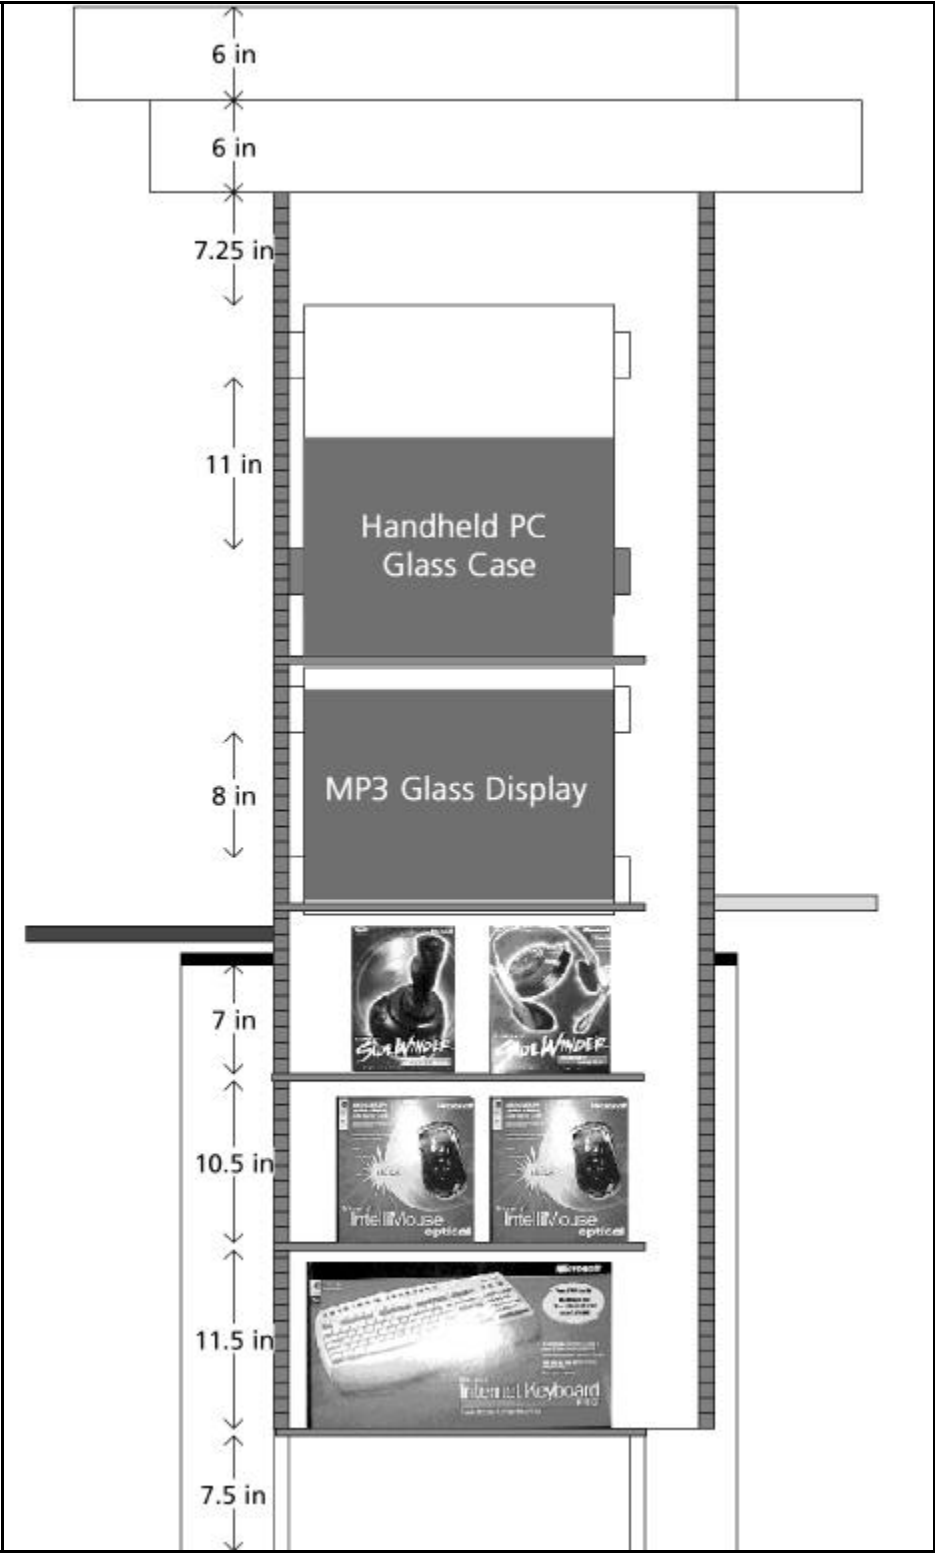

Place the glass cases on the Microsoft Internet Center as shown above. Refer to page 8 for product placement, or you can order FaxBack document #65999 by calling 1-800-323-6586.

# One Display Case

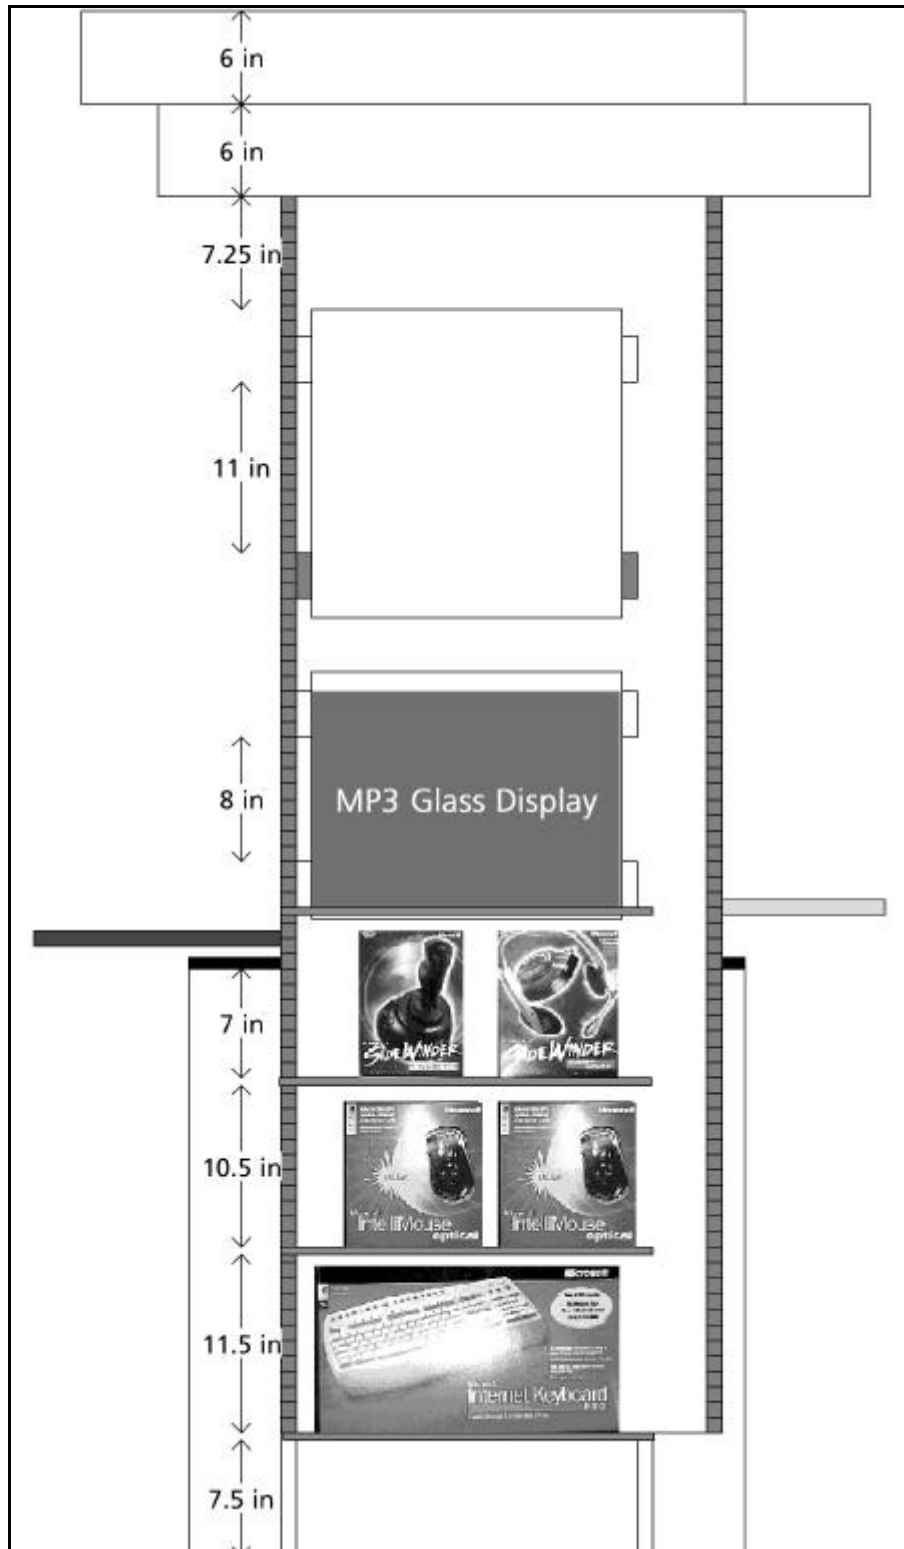


Place the glass case on the Microsoft Internet Center as shown above. Refer to page 8 for product placement, or you may order FaxBack document #66000 by calling 1-800-323-6586.

# Securing the Cases (Very Important!!)



**Step 1:** You will need to "store use" a package of the 278-1631 wire ties if you do not already have wire ties open. The wire ties must fit through the holes in the metal shelves.

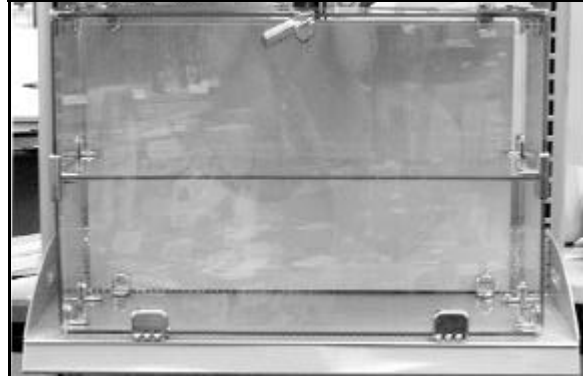

**Step 2:** Place one of the glass cases on the shelf indicated on page 5 or 6 depending on the number of cases you have. **Be careful, the case will slide off the shelf until it is secured to the shelf.**



**Step 3:** On each corner of the case you will need to run a wire tie through the bottom of the shelf (be sure to run it through the hole closest to the bracket). Then push the wire tie between the right angle bracket and the glass as shown above. You may need to loosen the bracket some and push the glass up to allow the wire tie to slide through.



**Step 5:** If the blue strips are missing from the front of the metal shelves, use the ones provided with the case to replace them.



**Step 4:** Run the wire tie back down through the hole closest to the bracket. Then tighten the wire tie. Using wire cutters clip the excess wire tie off. Then repeat these steps for each corner of the glass case.



**Step 6:** If you have a Handheld PC case, you will need to "store use" a package of Cable Clips (278-1639). Attach a clip to the back of each metal shelf in the center. Run the cables down through the clips on each shelf. Plug a power strip into the outlet under the Microsoft Internet Center. Place it up against the edge of the Internet Center under the shelves, and plug in the power cords for each Handheld PC. You will need to do this to demonstrate the Handheld PCs.

# Product Placement

Each store will receive a box of twelve acrylic stands (ACR-0072) in your next FFD shipment. Attach a Sprint shelf fact tag holder to the stands for pricing. Use the tent fact tag holders for the remaining products.

## Handheld PC Display



Put the Handheld PCs in the top glass display case. Place the Handheld PC units on the bottom shelf and the modem (250-0928) and folding keyboard (250-0927) on the top shelf of the glass case as shown. You will need to use the acrylic stands for the Casio handheld PC and Monochrome iPAQ since these units do not come with a charging stand. The Casio can be charged while sitting on the acrylic stand, but the Monochrome iPAQ can not. You will need to charge this unit only when the battery is low by laying it down inside the case.

## MP3 Display



Place the memory based MP3 players in the case first. If you still have room, place the portable CD based units on the bottom shelf as shown above. If you do not have room for the CD based units, place them in the Portable CD section (refer to planogram #41635 on FaxBack). You will need to use an acrylic stand for every MP3 player.