

FUNCTION

SO WIDE PRINTING BY LINE

LF,CR,FF,ESC,W 0,CAN,DC4 WILL STOP DOUBLE WI

DC4 DOUBLE WIDE OFF IF SET BY SO

SI CONDENSED MODE ON

DC2MODE OFF & GO TO 10 CPI

-1 ESC-1ONTINUOUS UNDERSCORE

-0 ESC-0ONTINUOUS UNDERSCORE

: ESC: SET 12 CPI

E ESC ET EMPHASIZED PRINTING

F ESC FL EMPHASIZED PRINTING

G ESC GRT DOUBLE STRIKE (NLQ)

H ESC HEL DOUBLE STRIKE (NLQ)

I0 ESC I 0TART NORMAL QUALITY

I2 ESC I 2T NEAR LETTER QUALITY

S0 ESC S 0' SUPER SCRIPT PRINTING

S1 ESC S 1,RT SUBSCRIPT PRINTING

T ESC TCEL SUB & SUPER SCRIPT

U1 ESC U 1ON PRINT LEFT TO RIGHT

U0 ESC U 0. DIRECTIONAL PRINTING

W1 ESC W 1 DOUBLE WIDE PRINTING

W0 ESC W 0NTINUOUS DOUBLE WIDE

\_1 ESC \_ 1ONTINUOUS OVERSCORE

\_0 ESC \_ 0ONTINUOUS OVERSCORE

FFFORM FEED CHARACTER

BEL SOUND BEEPER

yyy

zzz

DE