

Help for ix1 User interface

Topics:

[Bin File](#)

[D-Channel Protocol](#)

Help for Help

Help for Bin File

Help for Browse

Help for Protocol

Help for Line Access

Help for TEI

Help for Dial Up Line

Help for Leased Line

Help for Bundle

Help for Channel

Help for TE Side

Help for NT Side

Help for Voicecoding

Help for Spid

Help for DN

Help for Boot File

Help for Point to Point / Point to Multipoint

Help for Advanced

Help for For all Lines

Help for Bin File Description

Help for Boot File Description

Help for Clock Master / Clock Slave

Help for Interrupt

Help for IO Base Address

Help for Mapped Memory

Help for Jumper Setting

Help for Country

Help for MVIP Type

