

# ASUSTeK Computer BIOS

homepage: <http://www.asus.com.tw/>

ASUSTeK Computer Inc. All rights reserved. © 1997-2000

ASUS F2H~^ŠeŽD, "æ, ÑDOS/V POWER REPORT • ÖW •", Å, í AfAfbfvff [fg, É, æ, é, ç, ©, È, é "ŠQ, ÉŠÖ, µ, Ä, à^ê Ø Ó" C, ð • %o, ç, Ü, ¹, ñ, Ì, Å, , ç, ©, ¶, ß, ²—¹³, -, ¾, ³, ç B



à-¾, ð • Ž!, µ, Ü, • B

**NEW!** V<K, ÉŽû~^, ³, è, ½ftf@fCf<

**UP!** XV, ³, è, ½ftf@fCf<

## ft [fefBfŠfefB

ASUS flash utility version 3.3

DISC1:\BIOS\ASUS\FLASH

ASUS new Plug and Play BIOS flash utility for 2MB flash EEPROM

DISC1:\BIOS\ASUS\PFLASH2

ASUS new Plug and Play BIOS flash utility version 1.5

DISC1:\BIOS\ASUS\PFLASH

• PentiumII f}fU [f{ [fh

• KN97

KN97 BIOS Ver. 0114. 1998/3/23 **NEW!**

DISC1:\BIOS\ASUS\NAKI0114

• P/I-P65UP8 + C-PKND

P/I-P65UP8 + C-PKND PnP BIOS Ver. 0216. 1998/2/24 **UP!**

DISC1:\BIOS\ASUS\ND8K0216

• P2L97

P2L97 BIOS Ver. 0107. 1998/3/9 **UP!**

DISC1:\BIOS\ASUS\LX2I0107

• P2L97-A

P2L97A BIOS Ver. 0106. 1998/3/16 **UP!**

DISC1:\BIOS\ASUS\LX2A0106

• P2L97-DS

**P2L97-DS BIOS Ver. 0106. 1998/3/9** **UP!**

 DISC1:\BIOS\ASUS\LXDS0106

 **P2L97-S**

**P2L97-S BIOS Ver. 0106. 1998/3/9** **UP!**

 DISC1:\BIOS\ASUS\LX2S0106

 **PentiumPro f}fU[f{[fh**

 **P/I-P65UP8 + C-P6ND**

**P/I-P65UP8 + C-P6ND PnP BIOS Ver. 0216. 1998/2/24** **UP!**

 DISC1:\BIOS\ASUS\ND8I0216

 **Pentium f}fU[f{[fh**

 **SP97-(V)**


**SP97-V BIOS ver. 0106** **UP!**

 DISC1:\BIOS\ASUS\S97V0106

 **SP97-XV**

**SP97-XV BIOS ver. 0106** **NEW!**

 DISC1:\BIOS\ASUS\SPXV0106

 **TX97-LE**

**TX97-LE BIOS ver. 0109** 

 DISC1:\BIOS\ASUS\LE5I0109

 **TXP4**

**TXP4 BIOS ver. 0109** 

 DISC1:\BIOS\ASUS\XL5I0109