

Check this box to enable output to a TV.

Check this box to disable output to an analog monitor, provided the TV output is currently active.

Check this box to switch your TV signal type between NTSC and PAL.

Choose the type of setting you want to change, then adjust it with the slider below.

Adjust TV properties.

Move the TV picture up.

Move the TV picture down.

Move the TV picture to the left.



Move the TV picture to the right.

Click this box to display a selection of available output connectors.



