

MIDI Channel Messages

Note Off	8n kk vv
Note On	9n kk vv
Polyphonic After Touch	An kk tt
Control Change	Bn cc xx
Channel Mode:	
Local Control	Bn 7A xx
All Notes Off	Bn 7B 00
Omni Mode Off	Bn 7C 00
Omni Mode On	Bn 7D 00
Mono Mode On	Bn 7E cc
Poly Mode On	Bn 7F 00
Program Change	Cn pp
Channel After Touch	Dn tt
Pitch Wheel Change	En 11 hh

NOTE: n = channel number, 0-15

kk = key number (0-127)
vv = velocity (0-127)
kk = key number (0-127)
vv = velocity (1-127, 0 = note off)
kk = key number (0-127)
tt = after touch (0-127)
cc = controller (0-121)
xx = value (0-127)

xx = 0 (off), 127 (on)

cc = number of channels

pp = program (0-127)
tt = after touch (0-127)
ll = low byte (0-127)
hh = high byte (0-127)