

Sheet1

| DB_DEVICE,C,20     | DBDB_ACTION,C,20      | DB_DB_COIDB_B/DB,DBDB |      |   |   |   |  |  |  |
|--------------------|-----------------------|-----------------------|------|---|---|---|--|--|--|
| InterVideo GVR-810 | ### Frame Advance     | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Frame Rewind      | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Initialize Device | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Pause             | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Play              | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Play From         | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Play Range        | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Scan Backward     | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Scan Forward      | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Still Frame       | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| InterVideo GVR-810 | ### Stop              | 62 COM2               | 4800 | N | 8 | 1 |  |  |  |
| NEC PC-VCR         | ### Play Range        | COM2                  | 1200 | N | 8 | 1 |  |  |  |
| Pioneer (Generic)  | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Pioneer CLD-V2400  | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Pioneer LC-V330    | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Pioneer LD-V2200   | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Pioneer LD-V4200   | ### Play Range        | COM2                  | 4800 | N | 8 | 1 |  |  |  |
| Pioneer LD-V4400   | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Pioneer LD-V8000   | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Sony (Generic)     | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |
| Sony CRV           | ### Play Range        | COM2                  | 9600 | N | 8 | 1 |  |  |  |

Sheet1

DB\_COMMAND,C,128  
'FFWD#' %s ';PLYB' 0dh  
'REWD#' %s ';PLYB' 0dh  
'INIT' 0dh  
'PAUS' 0dh  
'PLYB' 0dh  
'FIND' %s ';PLYB' 0dh  
'FIND' %s ';PLYB' %s 0dh  
'SRCH-' 0dh  
'SRCH+' 0dh  
'FIND' %s ';PLYB;STIL' 0dh  
'STOP' 0dh  
'EP' 0dh 'AV1' 0dh 'MB2:0' 0dh 'JP' %s 0dh 'WN:PLAY-PS' 0dh 'AV0' 0dh 'SP' %s 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
%s 'SE' %s 'PL' 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
'SA' %s 'SE' %s 'PL' 0dh  
43h %s 40h 44h %s 40h  
43h %s 40h 44h %s 40h