


## SMC 8000 Ethernet Family Adapter Setup

Use this dialog box to configure settings for the SMC8000 Ethernet Family adapter cards. For more information click on a field in the dialog box displayed below or press <TAB> to move to the field and then press <ENTER>...

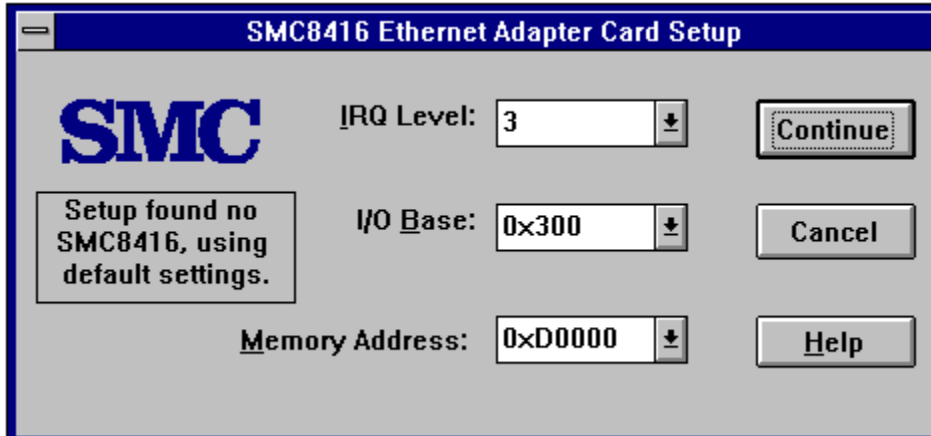

The image shows a Windows-style dialog box titled "SMC8416 Ethernet Adapter Card Setup". The dialog has a blue title bar and a grey background. On the left side, there is the SMC logo in blue. Below the logo, a text box contains the message: "Setup found no SMC8416, using default settings." To the right of the logo, there are three configuration fields, each with a label and a dropdown menu:

- IRQ Level:** The dropdown menu shows the value "3".
- I/O Base:** The dropdown menu shows the value "0x300".
- Memory Address:** The dropdown menu shows the value "0xD0000".

On the right side of the dialog, there are three buttons: "Continue" (with a dotted border), "Cancel", and "Help".

## IRQ Level

Select an interrupt level for this adapter card. [IRQ3](#) is the default setting.

## **I/O Base**

Select an I/O Port for this adapter card. [0x0300](#) is the default setting.

## RAM Address

Select the RAM base address for this adapter card. The default is [0xD0000](#).

## Detection Information

This information box gives information on whether an SMC adapter was detected or not. When one is detected, its settings are displayed in the dialogue as the defaults. If no adapter is detected, the default settings are: Interrupt 3, I/O base [0x0300](#), and RAM address [0xD0000](#).

## **Continue**

Select [Continue](#) to save the values defined in the dialog box and exit.

## **Cancel**

Select [Cancel](#) to exit leaving the current values unchanged.

## Help

Select [Help](#) to display this file.



## **SMC 91C100 Fast Ethernet Adapter Setup**

Use this dialog box to configure settings for the SMC 91C100 Fast Ethernet adapter card. For more information click on a field in the dialog box displayed below or press <TAB> to move to the field and then press <ENTER>...

## **Adapter Speed**

Select the speed at which the adapter operates. The default is [High Speed](#) or 100mb.  
If Low Speed is selected then the adapter will operate at 10mb.

# **SMC 8000 Ethernet Family Adapter Setup Help Contents**

Select one of the topics below for more information on setting up a specific adapter.

[SMC 8000 Ethernet Family Adapter Setup](#)



