

Contents

INTRODUCTION	1
OVERVIEW.....	1
WHAT'S INCLUDED	1
FACTORY DEFAULT SETTINGS	1
CARD SETUP	2
ADDRESS SELECTION	2
PORT ENABLE / DISABLE.....	3
IRQ SELECTION.....	3
INTERRUPT MODE OPTIONS	4
INSTALLATION	6
TECHNICAL DESCRIPTION	7
FEATURES.....	7
CONNECTOR PIN ASSIGNMENTS	8
RS-232.....	8
SPECIFICATIONS	9
ENVIRONMENTAL SPECIFICATIONS.....	9
MANUFACTURING	9
POWER CONSUMPTION	9
MEAN TIME BETWEEN FAILURES (MTBF).....	9
PHYSICAL DIMENSIONS	9
APPENDIX A - TROUBLESHOOTING	10
APPENDIX B - HOW TO GET ASSISTANCE	12
APPENDIX C - ELECTRICAL INTERFACE	13
RS-232.....	13
APPENDIX D - ASYNCHRONOUS COMMUNICATIONS	14
APPENDIX E - SILK-SCREEN.....	15
APPENDIX F - SCHEMATIC.....	16
APPENDIX G - COMPLIANCE NOTICES	18
FEDERAL COMMUNICATIONS COMMISSION STATEMENT.....	18
EMC DIRECTIVE STATEMENT	18
WARRANTY.....	19

Figures

Figure 1 - Address Selection Table.....	2
Figure 2 - DIP-Switch Illustration.....	2
Figure 3 - Headers E1, E2, E3, and E4	3
Figure 4 - Header E5, Normal IRQ Mode	4
Figure 5 - Header E5, Shared IRQ Mode	4
Figure 6 - Header E5, Sharing IRQ's with another adapter.....	5
Figure 7 - IRQ Headers E1 - E5 (Factory Default).....	5
Figure 8 - Connector Pin Assignments	8
Figure 9 - Asynchronous Communications Bit Diagram	14

©1996d Omega Engineering, Incorporated. All rights reserved.

Introduction

Overview

The Omega Engineering **OMG-VERSA-COMM4** provides the PC with four RS-232 asynchronous ports. The **OMG-VERSA-COMM4** allows for connection to any device utilizing the RS-232 electrical interface, such as modems, data-entry terminals, and plotters.

What's Included

The **OMG-VERSA-COMM4** is shipped with the following items. If any of these items are missing or damaged, contact the supplier.

- **OMG-VERSA-COMM4** Serial I/O Adapter
- "Spider" Cable providing 4 DB-25 connectors.
- 3.5" Serial Utility Diskette
- User Manual

Factory Default Settings

The **OMG-VERSA-COMM4** factory default settings are as follows:

Port #	Base Address	IRQ
Port 1	3F8	4
Port 2	2F8	3
Port 3	3E8	4
Port 4	2E8	3

To install the **OMG-VERSA-COMM4** using factory default settings, refer to the Installation section of this manual.

For your reference, record installed **OMG-VERSA-COMM4** settings below:

Port #	Base Address	IRQ
Port 1		
Port 2		
Port 3		
Port 4		

Card Setup

The **OMG-VERSA-COMM4** contains several jumper straps which must be set for proper operation.

Address Selection

Each port on the **OMG-VERSA-COMM4** occupies 8 consecutive I/O locations. A DIP-switch is used to set the base address for these locations. Be careful when selecting the base address as some selections conflict with existing ports. The following table shows several examples that typically do not cause a conflict. SW4 sets the I/O address for port 1, SW3 sets the address for port 2, SW2 sets the address for port 3 and SW1 sets the address for port 4.

Address Hex	Binary		Switch Position Setting						
	A9	A0	1	2	3	4	5	6	7
280-287	1010000XXX		Off	On	Off	On	On	On	On
2A0-2A7	1010100XXX		Off	On	Off	On	Off	On	On
2E8-2EF	1011101XXX		Off	On	Off	Off	Off	On	Off
2F8-2FF	1011111XXX		Off	On	Off	Off	Off	Off	Off
3E8-3EF	1111101XXX		Off	Off	Off	Off	Off	On	Off
300-307	1100000XXX		Off	Off	On	On	On	On	On
328-32F	1100101XXX		Off	Off	On	On	Off	On	Off
3F8-3FF	1111111XXX		Off	Off	Off	Off	Off	Off	Off

Figure 1 - Address Selection Table

The following illustration shows the correlation between the DIP-switch setting and the address bits used to determine the base address. In the example below, address 300 is selected as a base. Address 300 in binary is XX11 0000 0XXX where X = a non-selectable address bit.

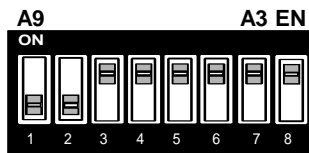


Figure 2 - DIP-Switch Illustration

Note: Setting the switch "On" or "Closed" corresponds to a "0" in the address, while leaving it "Off" or "Open" corresponds to a "1".

Refer to Appendix A for common address contentions.

Port Enable / Disable

Each port on the **OMG-VERSA-COMM4** can be enabled or disabled with switch position 8 on the DIP-switch. The port is enabled with the switch "On" or "Closed" and disabled when "Off" or "Open". If any port is disabled, be sure to disable the interrupt request for that port by removing the IRQ jumper.

IRQ Selection

Headers E1, E2, E3 and E4 select the IRQ for each serial port. If COM1: is selected, this jumper must be on the IRQ4 setting. If COM2: is selected, this jumper must be on IRQ3.

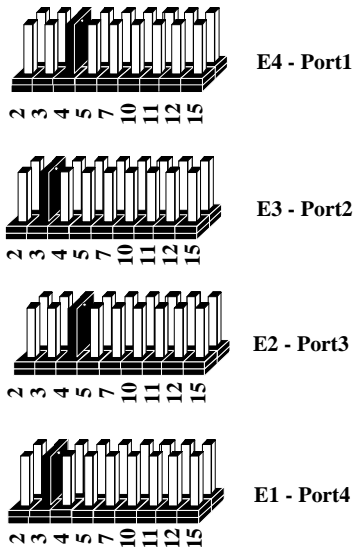


Figure 3 - Headers E1, E2, E3, and E4 (Factory Default)

Note: Most communications software applications default COM3: to IRQ4 and COM4: to IRQ3. This requires the sharing of interrupts between COM1: and COM3:, and between COM2: and COM4:. While this is the default, it is not always the preferred setting. Check your software configuration instructions to determine the most appropriate IRQ selection.

Interrupt Mode Options

Header E5 selects the interrupt mode for each port. Each port must be set in the correct mode to insure proper installation.

"N" indicates the (N)ormal, single interrupt per port mode. "S" Indicates the (S)hared interrupt mode, which allows more than one port to access a single IRQ. Any two or more ports can share a common IRQ by placing the jumpers on the same IRQ setting, and setting the appropriate selections at E5. Consult your particular software for IRQ selection. If no interrupt is desired, remove the jumper. "M" indicates the inclusion of a 1K ohm pull-down resistor required on one port when sharing interrupts.




Figure 4 - Header E5, Normal IRQ Mode

Set jumpers to "S" for shared interrupt mode on all blocks sharing an IRQ except one. Set that port block for "M". This provides the pull-down resistor circuit that makes sharing of IRQs possible. If you are using more than one **OMG-VERSA-COMM4** or a compatible card in a bus you should only have one port set to "M". The following example shows all four ports sharing a single IRQ.



Figure 5 - Header E5, Shared IRQ Mode

Set jumper to "S" if you are using more than one **OMG-VERSA-COMM4** in a bus or you wish to completely remove the pull-down resistor for hardware compatibility. **Setting the board in this configuration when it is not accompanied by a pull-down resistor will prevent the ports from triggering an interrupt..**



Figure 6 - Header E5, Sharing IRQ's with another adapter

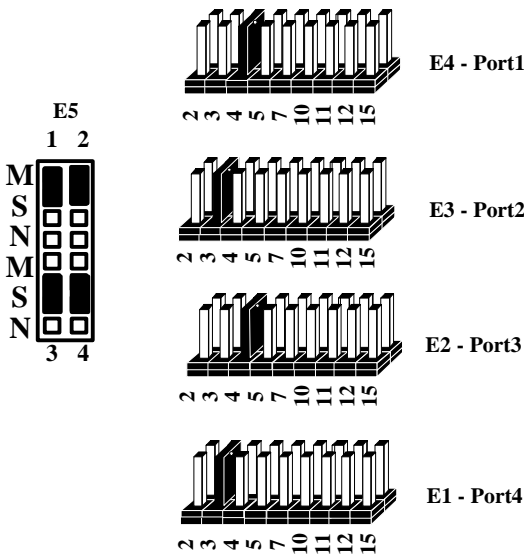


Figure 7 - IRQ Headers E1 - E5 (Factory Default)

The above example shows the correlation between jumper block E5 and the interrupt jumpers (E1-E4). This example shows the **OMG-VERSA-COMM4** shipping configuration with COM1: & COM3: sharing interrupt 4 and COM2: & COM4: sharing interrupt 3.

Installation

The **OMG-VERSA-COMM4** can be installed in any of the PC expansion slots, but to access the “AT” or (E)ISA IRQ’s (10, 11, 12, 15) it must be installed in one of the 16 bit slots. The **OMG-VERSA-COMM4** contains several jumper straps for each port which must be set for proper operation prior to installing the card into the computer.

1. Turn off PC power. Disconnect the power cord.
2. Remove the PC case cover.
3. Locate an available slot and remove the blank metal slot cover.
4. Gently insert the **OMG-VERSA-COMM4** into the slot. Make sure that the adapter is seated properly.
5. Replace the screw.
6. Install the “Spider” Cable
7. Replace the cover.
8. Connect the power cord.

Installation is complete.

Technical Description

The Sealevel **OMG-VERSA-COMM4** provides 4 additional serial ports for terminals, modems, printers, etc. The **OMG-VERSA-COMM4** can be configured as COM1: through COM4:, or as any other I/O address (up to 3FF HEX), providing total compatibility with most communications software and languages. The **OMG-VERSA-COMM4** utilizes the 16550 UART chip. This chip features programmable baud rate, data format, interrupt control and a 16 byte fifo.

Features

- Provides a COM1: through COM4: Turnkey Solution
- Four RS-232 Ports with full modem control signals
- Individually Selectable Addresses
- Selectable/Sharable Interrupts (IRQ's 2(9)-7,10,11,12,& 15)
- 4 DB-25 male connectors provided using the Omega Engineering "Spider Cable"

Modem Control Signal Considerations

Some software packages require the use of the modem handshake signals such as CTS or DCD. Refer to your application software manual to determine the requirements for modem control signals. If no requirements are mentioned, a safe configuration is to tie DTR to DSR and DCD, and tie RTS to CTS. This configuration will typically satisfy the modem control signal requirements for most communications software.

Connector Pin Assignments

RS-232

Signal	Name	Pin #	Mode
GND	Ground	7	
TD	Transmit Data	2	Output
RTS	Request To Send	4	Output
DTR	Data Terminal Ready	20	Output
RD	Receive Data	3	Input
CTS	Clear To Send	5	Input
DSR	Data Set Ready	6	Input
DCD	Data Carrier Detect	8	Input
RI	Ring Indicator	22	Input

Figure 8 - Connector Pin Assignments

Specifications

Environmental Specifications

Specification	Operating	Storage
Temperature Range	0° to 50° C (32° to 122° F)	-20° to 70° C (-4° to 158° F)
Humidity Range	10 to 90% R.H. Non-Condensing	10 to 90% R.H. Non-Condensing

Manufacturing

- IPC 610-A Class-III standards are adhered to with a 0.1 visual A.Q.L. and 100% Functional Testing.
- All Omega Engineering Printed Circuit boards are built to U.L. 94V0 rating and are 100% electrically tested. These printed circuit boards are solder mask over bare copper or solder mask over tin nickel.

Power Consumption

Supply line	+12 VDC	-12 VDC	+5 VDC
Rating	50 mA	50 mA	200 mA

Mean Time Between Failures (MTBF)

Greater than 150,000 hours. (Calculated)

Physical Dimensions

Board length	8.6 inches	(21.84 cm)
Board Height including Goldfingers	4.2 inches	(10.66 cm)
Board Height excluding Goldfingers	3.9 inches	(9.91 cm)

Appendix A - Troubleshooting

A Serial Utility Diskette is supplied with the Omega Engineering adapter and will be used in the troubleshooting procedures. By using this diskette and following these simple steps, most common problems can be eliminated without the need to call Technical Support.

1. Identify all I/O adapters currently installed in your system. This includes your on-board serial ports, controller cards, sound cards etc. The I/O addresses used by these adapters, as well as the IRQ (if any) should be identified.
2. Configure your Omega Engineering adapter so that there is no conflict with currently installed adapters. No two adapters can occupy the same I/O address.
3. Make sure the Omega Engineering adapter is using a unique IRQ. While the Omega Engineering adapter does allow the sharing of IRQ's, many other adapters (i.e. SCSI adapters & on-board serial ports) do not. The IRQ is typically selected via an on-board header block. Refer to the section on Card Setup for help in choosing an I/O address and IRQ.
4. Make sure the Omega Engineering adapter is securely installed in a motherboard slot.
5. Use the supplied diskette and User Manual to verify that the Omega Engineering adapter is configured correctly. The supplied diskette contains a diagnostic program "SSD" that will verify if an adapter is configured properly. This diagnostic program is written with the user in mind and is easy to use. Refer to the "README" file on the supplied diskette for detailed instructions on using "SSD".

6. The following are known I/O conflicts:
 - The 278 and 378 settings may conflict with your printer I/O adapter.
 - 3B0 cannot be used if a Monochrome adapter is installed.
 - 3F8-3FF is typically reserved for COM1:
 - 2F8-2FF is typically reserved for COM2:
 - 3E8-3EF is typically reserved for COM3:
 - 2E8-2EF is typically reserved for COM4:
7. Please refer to your included diskette for any post production manual updates and application specific information.
8. Always use the Omega Engineering diagnostic software when Troubleshooting a problem. This will eliminate the software issue from the equation.

Appendix B - How To Get Assistance

Please refer to Appendix A - Troubleshooting prior to calling Technical Support.

1. Read this manual thoroughly before attempting to install the adapter in your system.
2. When calling for technical assistance, please have your user manual and current adapter settings. If possible, please have the adapter installed in a computer ready to run diagnostics.
3. Omega Engineering maintains a web site at WWW.OMEGA.COM, where the latest manuals and software revisions may be found
4. Technical support is available Monday to Friday from 8:30 a.m. to 6:00 p.m. Eastern time. Technical support can be reached at (800)826-6342 x2295.

RETURN AUTHORIZATION MUST BE OBTAINED FROM OMEGA ENGINEERING BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING OMEGA ENGINEERING AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

Appendix C - Electrical Interface

RS-232

Quite possibly the most widely used communication standard is RS-232. This implementation has been defined and revised several times and is often referred to as RS-232-C/D/E or EIA/TIA-232-C/D/E. It is defined as *“Interface between Data Terminal Equipment and Data Circuit-Terminating Equipment Employing Serial Binary Data Interchange”*. The mechanical implementation of RS-232 is on a 25 pin D sub connector. The IBM PC computer defined the RS-232 port on a 9 pin D sub connector and subsequently the EIA/TIA approved this implementation as the EIA/TIA-574 standard. This standard has defined as the *“9-Position Non-Synchronous Interface between Data Terminal Equipment and Data Circuit-Terminating Equipment Employing Serial Binary Data Interchange”*. Both implementations are in wide spread use and will be referred to as RS-232 in this document. RS-232 is capable of operating at data rates up to 20 Kbps / 50 ft. The absolute maximum data rate may vary due to line conditions and cable lengths. RS-232 often operates at 38.4 Kbps over very short distances. The voltage levels defined by RS-232 range from -12 to +12 volts. RS-232 is a single ended or unbalanced interface, meaning that a single electrical signal is compared to a common signal (ground) to determine binary logic states. A voltage of +12 volts (usually +3 to +10 volts) represents a binary 0 (space) and -12 volts (-3 to -10 volts) denotes a binary 1 (mark). The RS-232 and the EIA/TIA-574 specification define two types of interface circuits **Data Terminal Equipment (DTE)** and **Data Circuit-Terminating Equipment (DCE)**. The Omega Engineering Adapter is a DTE interface.

Appendix D - Asynchronous Communications

Serial data communications implies that individual bits of a character are transmitted consecutively to a receiver that assembles the bits back into a character. Data rate, error checking, handshaking, and character framing (start/stop bits) are pre-defined and must correspond at both the transmitting and receiving ends.

Asynchronous communications is the standard means of serial data communication for PC compatibles and PS/2 computers. The original PC was equipped with a communication or COM: port that was designed around an 8250 Universal Asynchronous Receiver Transmitter (UART). This device allows asynchronous serial data to be transferred through a simple and straightforward programming interface. Character boundaries for asynchronous communications are defined by a starting bit followed by a pre-defined number of data bits (5, 6, 7, or 8). The end of the character is defined by the transmission of a pre-defined number of stop bits (usual 1, 1.5 or 2). An extra bit used for error detection is often appended before the stop bits.


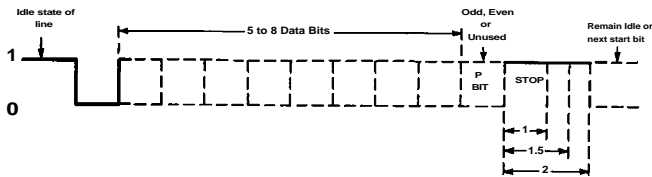


Figure 9 - Asynchronous Communications Bit Diagram

This special bit is called the parity bit. Parity is a simple method of determining if a data bit has been lost or corrupted during transmission. There are several methods for implementing a parity check to guard against data corruption. Common methods are called (E)ven Parity or (O)dd Parity. Sometimes parity is not used to detect errors on the data stream. This is referred to as (N)o parity. Because each bit in asynchronous communications is sent consecutively, it is easy to generalize asynchronous communications by stating that each character is wrapped (framed) by pre-defined bits to mark the beginning and end of the serial transmission of the character. The data rate and communication parameters for asynchronous communications have to be the same at both the transmitting and receiving ends. The communication parameters are baud rate, parity, number of data bits per character, and stop bits (i.e. 9600,N,8,1).

Appendix E - Silk-Screen

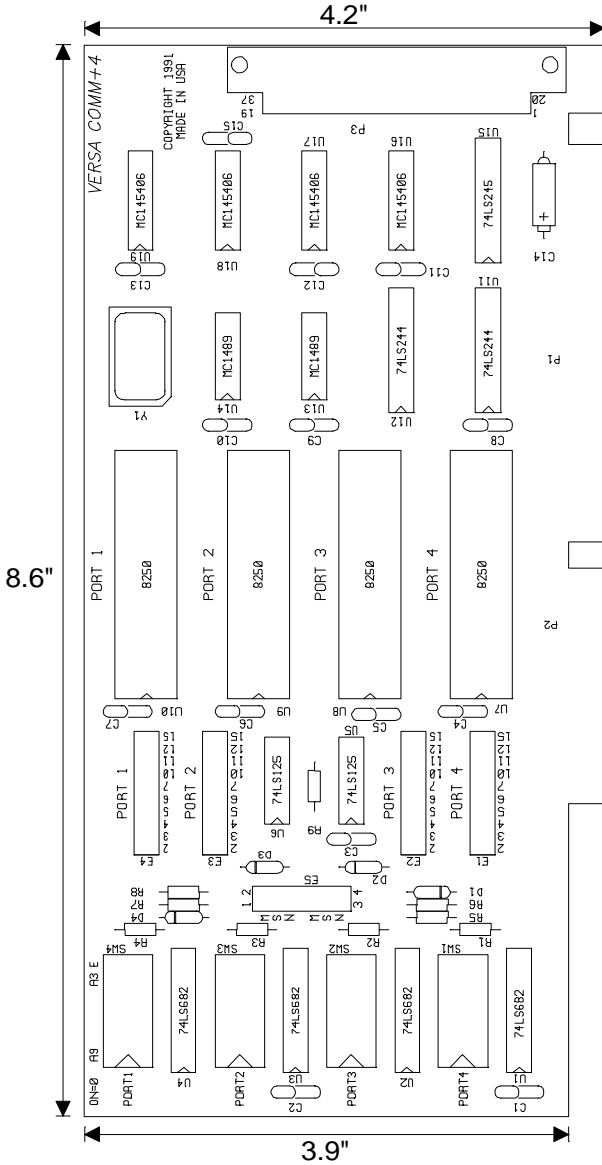

Appendix F - Schematic

Appendix G - Compliance Notices

Federal Communications Commission Statement

FCC - This equipment has been tested and found to comply with the limits for Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in such case the user will be required to correct the interference at his own expense.

EMC Directive Statement



Products bearing the CE Label fulfill the requirements of the EMC directive (89/336/EWG) and of the low-voltage directive (73/23/EWG) issued by the European Commission.

To obey these directives, the following European standards must be met:

- **EN55022 Class A** - “Limits and methods of measurement of radio interference characteristics of information technology equipment”
- **EN50082-1** - “Electromagnetic compatibility - Generic immunity standard”
- Part 1 : Residential, commercial and light industry
- **EN60950 (IEC950)** - “Safety of information technology equipment, including electrical business equipment”

Always use cabling provided with this product if possible. If no cable is provided or if an alternate cable is required, use high quality shielded cabling to maintain compliance with FCC/EMC directives.

Warranty

Omega Engineering, Inc. warrants this product to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, Omega Engineering will, at it's option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Omega Engineering assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Omega Engineering will not be liable for any claim made by any other related party.

RETURN AUTHORIZATION MUST BE OBTAINED FROM OMEGA ENGINEERING BEFORE RETURNED MERCHANDISE WILL BE ACCEPTED. AUTHORIZATION CAN BE OBTAINED BY CALLING OMEGA ENGINEERING AND REQUESTING A RETURN MERCHANDISE AUTHORIZATION (RMA) NUMBER.

Omega Engineering, Incorporated

PO Box 4047

One Omega Drive

Stamford, CT 06907

(800)826-6342 FAX: (203)3597990

email: Internet: das@omega.com

Technical Support is available from 8:30 a.m. to 6 p.m. Eastern time.
Monday - Friday

Trademarks

Omega Engineering, Incorporated acknowledges that all trademarks referenced in this manual are the service mark, trademark, or registered trademark of the respective company.

OMG-VERSA-COMM4 is a trademark of Omega Engineering, Incorporated.